
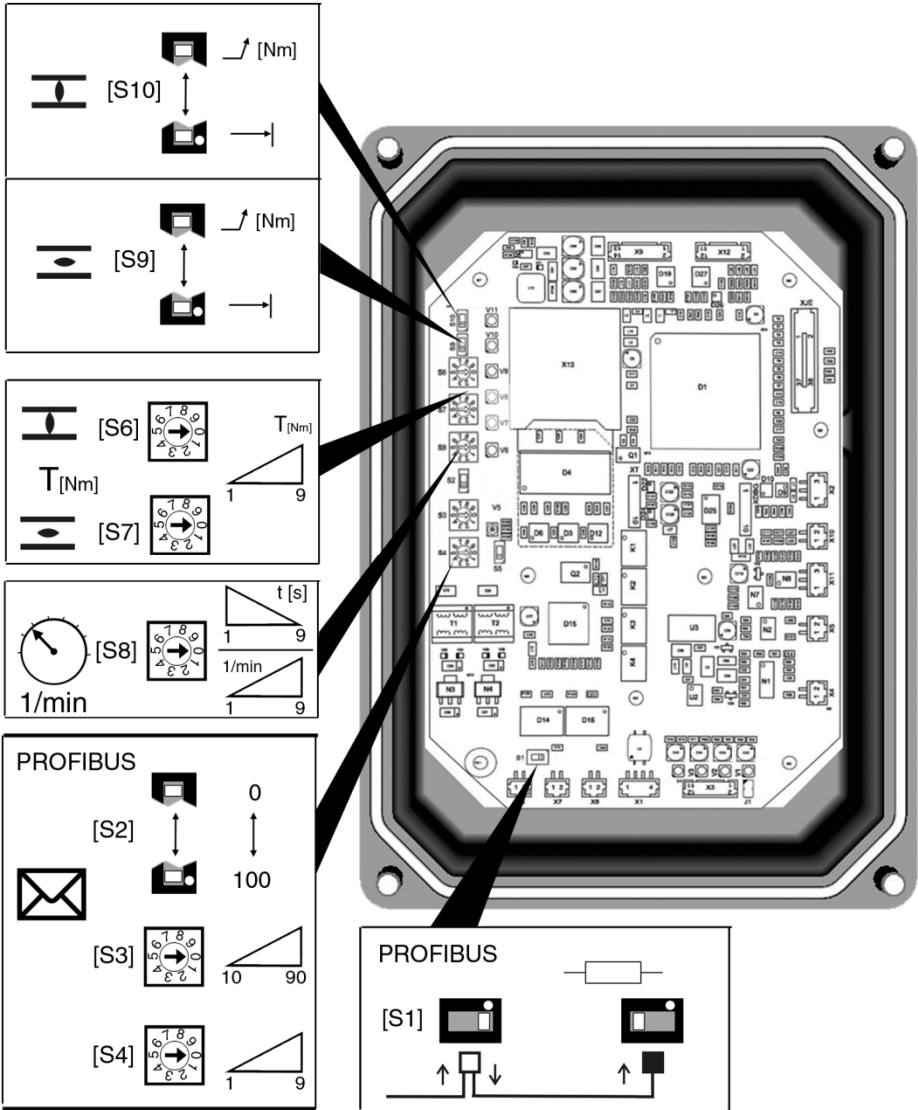


**Before commissioning:** Read operation instructions for the actuator. Especially the safety instructions included there must be observed.

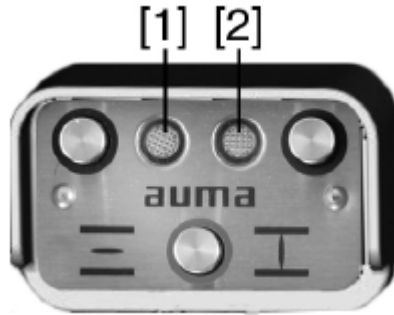

- [S10/S9] Type of seating (limit or torque seating)
- [S6/S7] Tripping torque  $T$  [Nm]
- [S8] Output speed (rpm)/operating time ( $t$ )[s]
- [S2/S3//S4] Bus address
- [S1] Termination resistor

**Indication lights** local controls (option):

LED [1]	Status	Signification
green	illuminated	Actuator is in end position OPEN
red	1 blink	Torque fault
	2 blinks	Thermal fault
	3 blinks	Signal loss of analogue input
	4 blinks	Operation mode DISABLED
	5 blinks	Signal loss of E2
	6 blinks	Actuator is outside a permissible position
	7 blinks	Fault of controls temperature
	8 blinks	Firmware download/upload corrupt
9 blinks	All other faults	

LED [2]	Status	Signification
yellow	illuminated	Actuator is in end position CLOSED
blue	blinking	Operation mode LOCAL is active